


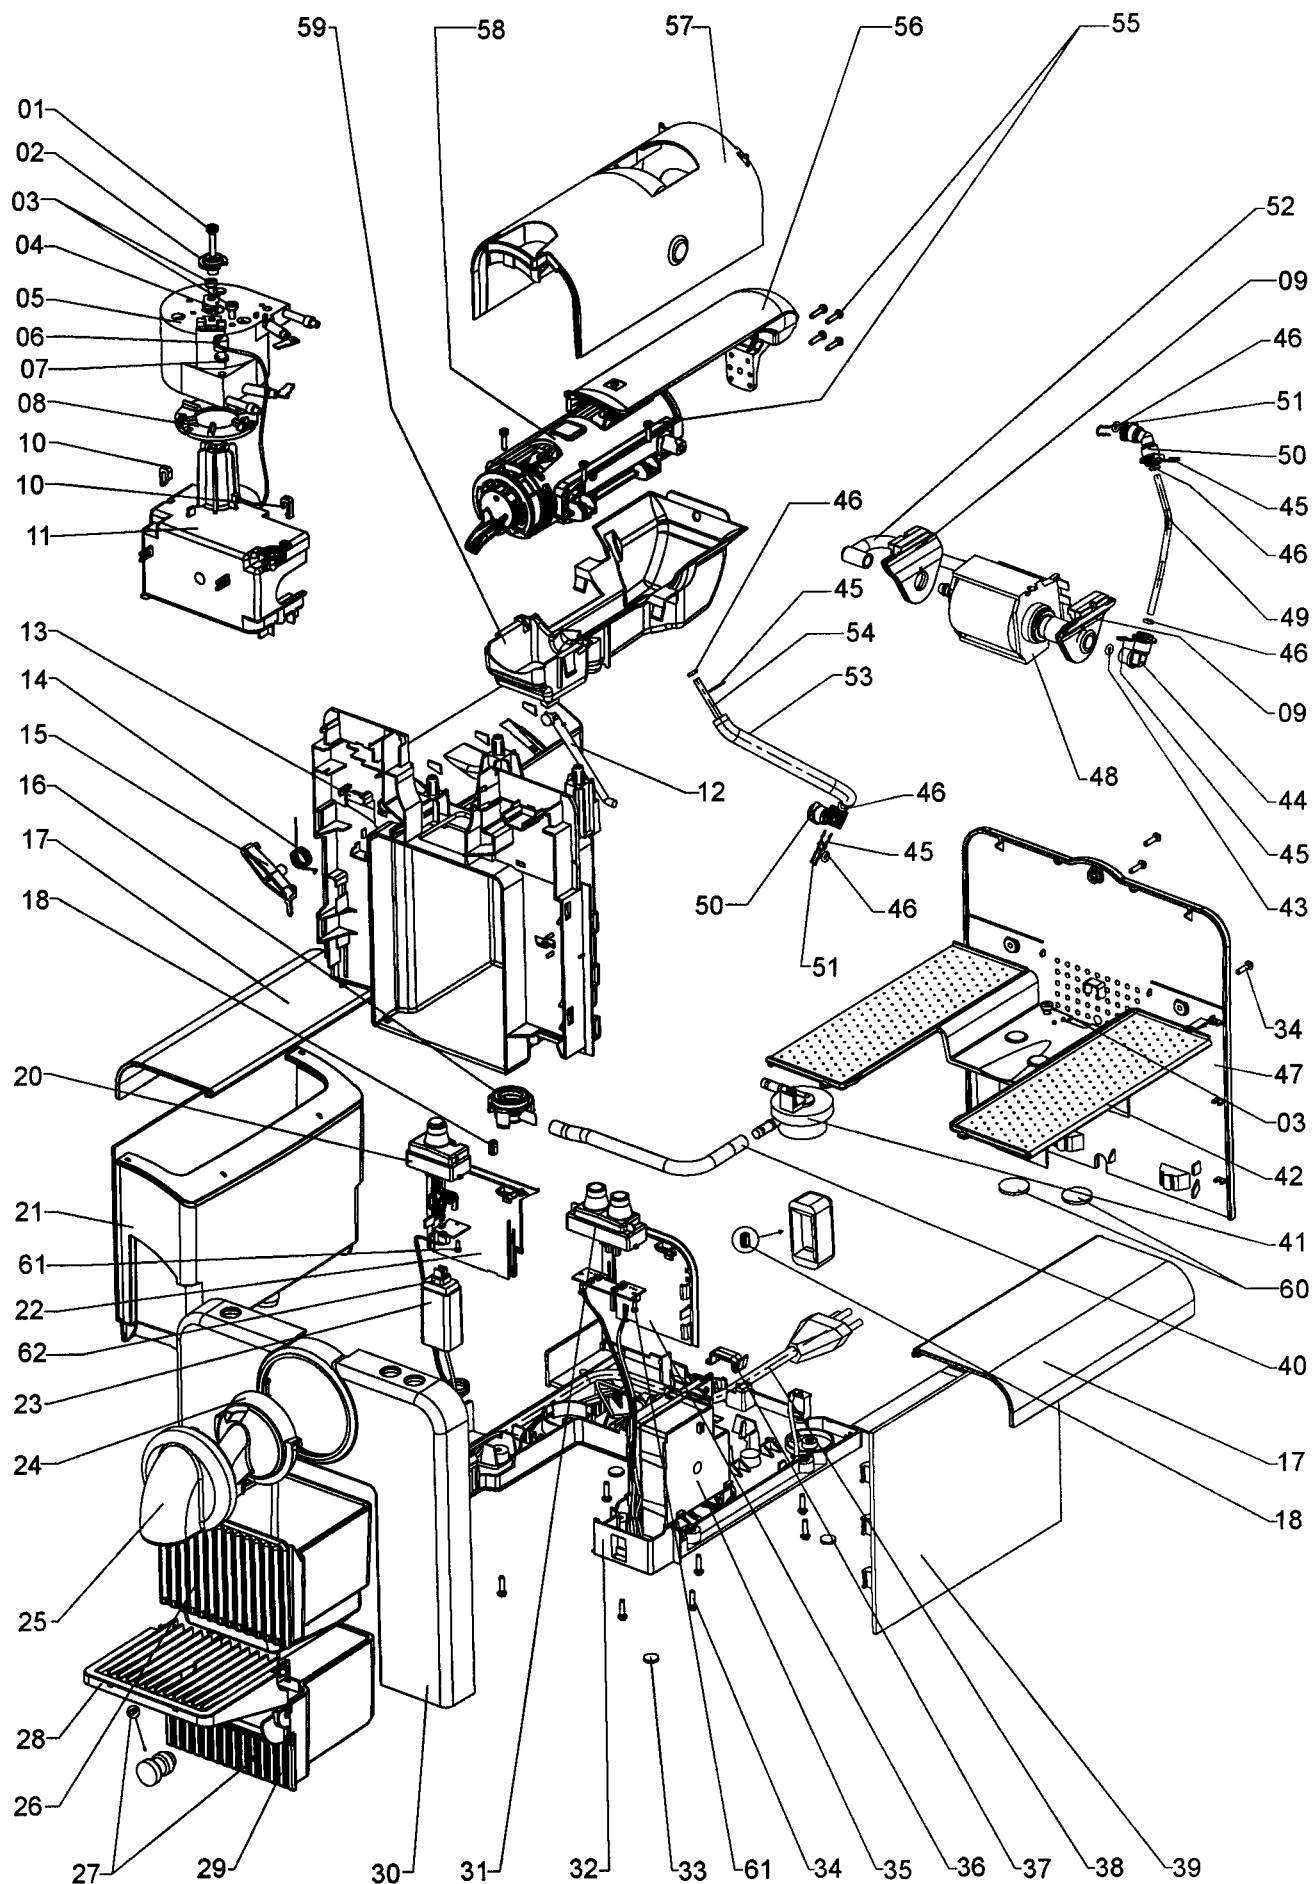

NESPRESSO "DE" EN185.M

Pos.	Code	Description
01	ES0044291	SCREW
02	ES0043227	SUPPORT
03	ES0019799	SCREW
04	ES0021542	CLIP
05	ES0045707	THERMOBLOCK
06	ES0044718	SENSOR NTC
07	ES0005245	RING
08	ES0043229	GASKET
09	ES0043232	SUPPORT
10	ES0043230	SUPPORT
11	ES0043231	SUPPORT
12	ES0043299	INDICATOR
13	ES0043258	SUPPORT
14	ES0043298	SPRING
15	ES0043303	CLIP
16	ES0047821	VALVE
17	ES0043284	COVER
18	ES0043296	RUBBER PAD
20	ES0044752	PUSH BUTTON
21	ES0043261	TANK
22	ES0043286	SUPPORT
23	ES0043287	SUPPORT
24	ES0043246	DISTRIBUTOR
25	ES0044851	COVER
26	ES0043254	CONTAINER
27	ES0043297	FOOT
28	ES0043302	PROTECTION
29	ES0043259	TRAY
30	ES0046861	FRONT PANEL
31	ES0044753	KEYBOARD
32	ES0049013	SUPPORT BASE
33	ES0000395	FOOT

NESPRESSO "DE" EN185.M

Pos.	Code	Description
34	ES0024863	SCREW
35	ES0047822	BOARD
36	ES0043285	SUPPORT
37	ES0007742	WIRE CLAMP
38	ES0044297	POWER SUPPLY CORD
39	ES0043255	SIDE
40	ES0013920	TUBE
41	ES0043065	WATER VOLUME METER
42	ES0043301	COVER
43	ES0001565	O-RING
44	ES0042570	CONNECTION
45	ES0005470	CLIP
46	ES0024374	O-RING
47	ES0043256	REAR PANEL
48	ES0049600	PUMP
49	ES0015821	TUBE
50	ES0042572	CONNECTOR
51	ES0037384	CLIP
52	ES0043304	CONNECTION
53	ES0024971	TUBE
54	ES0029994	TUBE
55	ES0016052	SCREW
56	ES0043257	LEVER
57	ES0043253	COVER
58	ES0047185	INFUSOR
59	ES0043288	SUPPORT
60	ES0045538	CONNECTOR
61	ES0045686	SCREW
62	ES0043771	SWITCH